DB / DB+
User Manual

It's the technology you want with unbeatable value.

Contact Us:

www.deerbrookelectronics.com

DeerBrook Electronics, LLC
308 E LEMON ST STE 107
Lakeland, FL 33801

External Buttons

MINI USB- This makes USB devices usable on your tablet (keyboard, mouse, etc.). Use your included OTG cable to do this.
DC- Plug your wall charger into here.
Power- Hold this button down to turn the tablet on or off.
Volume- Pressing the top half will increase volume and pressing the bottom half will lower the volume of the speakers.
TF card- You can expand the hard drive up to 32GB. Insert a MicroSD card here if needed.
Earphone- Plug in headphones here.
MIC- Do not plug in anything here. This is for recording sound.

Troubleshooting:

My battery is only lasting xx hours!

-Your tablet comes with the brightness setting turned all the way up. For most uses, especially indoors, turning the brightness setting down will increase battery life.

-Your battery life can vary widely depending on how you're using the tablet. For example playing a game, browsing the internet, or downloading and running apps will cause a much shorter battery life than if the tablet is at rest.

How do I set the clock?

-Under "Settings" select the option for "Date and Time." First, deselect the option to "Use network provided time." Next, deselect the option to use "military time." Now, enter your correct date and time and it will display throughout the tablet.

Charging Issues:

-It's plugged in, but won't turn on. The tablet is likely completely dead. Once plugged in, a red battery icon will flash and then disappear. This means the tablet is charging. It will need some time (usually 15-20 min) to develop enough charge to turn on. The screen will be blank and the tablet will remain off while charging.

-It's plugged in, but doesn't show charging. A red, yellow, or green (color depends on how much charge is in the tablet) will flash and then disappear. To speed charging, the screen will remain turned off and blank while charging.

-There are two different ways to charge your tablet. You can use the AC wall adapter, or you can use the included USB cord connected to your computer. You can also use most USB auto and wall chargers you may have using the included USB cord.

My tablet's screen is not responsive/jerky!

- Remove the plastic film. The plastic film on top is to prevent damage from storage and shipping and is not meant to remain in place. It will drastically reduce the performance of the touch screen. The film is an absolute perfect fit, and may be difficult to notice. Start peeling at one of the corners to make it easier to remove.

My tablet's screen is scratched! Is the tablet used or refurbished?

- DeerBrook Electronics, LLC does not deal in used or refurbished tablets. There is a plastic film on the screen to protect the device during storage and transit. If you see scratches/scuffs on the screen of your new tablet, it is only on this plastic film. Remove this film to reveal a perfect screen. Start peeling at one of the corners to make it easier to remove.

The tablet is frozen or stuck and pressing buttons doesn't work.

- If the tablet is frozen or stuck on a certain screen, perform a reboot. This is done by holding down the power button and volume up button for 10 seconds with the tablet off. Continue holding these two buttons while the tablet boots up. Once the boot menu comes up, select the "reboot" option. You may need to use the volume up/down buttons to scroll to this option. Click the power button quickly to select "reboot."

How do I completely reset the tablet?

-You may want to delete all apps and personal information on the tablet for various reasons. This is done by holding down the power button and volume up button for 10 seconds with the tablet off. Continue holding these two buttons while the tablet boots up. Once the boot menu comes up, select the "wipe all user data" option. You may need to use the volume up/down buttons to scroll to this option. Click the power button quickly to select "reboot."

Trouble connecting to WiFi?

See section 4.2 for general instructions. If your WiFi network is password protected, connecting is a two step process. First select you network and enter your password. Then, revisit the network and select "connect." This is in contrast to the instruction in 4.2, when the network is not password protected.

How do I file a warranty claim?

Use the contact form at www.deerbrookelectronics.com to receive warranty information.

General notices for use

Disassembly, customization or repairs without the appropriate knowledge and precautions can be dangerous. Don't disassemble your tablet. Avoid use in extreme conditions such as high and low temperatures, high humidity or moist environments and around magnetic fields. Also avoid long-time exposure to sunlight. Only use DeerBrook designed accessories to guarantee fit, function, and preservation of warranty.

Use a protective case to avoid extreme physical shocks to the device (i.e. dropping).

Your tablet comes with a partially charged battery. Please make sure to fully charge the battery or have the charger inserted before first use to avoid possible damage.

Box Contents

DeerBrook Tablet, AC Wall Adapter, USB Cable, OTG Cable.

Use your USB cable to connect to your computer for charging or sharing files. Use the OTG cable to connect USB devices and accessories into your tablet.

1.2 Start up and shut down

To start your device, press and hold the 'Power button' until the screen lights up. To shut down your device, press and hold the 'Power button' until the following dialog popup appears.

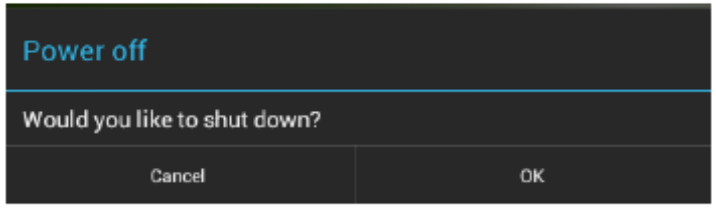

2.0 Introduction to Google Android 4.2

2.1 The Desktop

The main area of interest will be the desktop itself. Here you will place shortcuts to Apps or widgets – a visual application that can display real-time information. There may be some pre-installed icons and widgets on your tablet.

To change the desktop background image of your tablet return to your desktop by pressing the 'HOME' icon. Press and hold an open space on the desktop (don't press an icon) - until a popup appears named '*Select wallpaper from*'. In the list may appear multiple options to select an image or animated image of choice. The option '*Live Wallpapers*' will show the pre-installed animated desktop images. Other options such as a '*Super-HD Player*', '*Gallery*' or '*Wallpapers*' allow you to select (widescreen) photos, downloaded images or other images; depending on the features of that specific application.

To place a widget or app shortcut on the desktop, touch and hold the icon until the App drawer fades and the desktop appears. Move your finger to the location where you want to place the icon and release your touch to place the icon.

To move or delete icons and widgets from your desktop, touch and hold the icon until a grid appears. Move the icon to the new location or drag it to the 'X Remove' bar on the top of the screen to remove it. Releasing the touch screen will confirm your action.

2.4 Navigation icons – bottom of the screen

On the bottom of the screen you will find three icons: use the navigation icons 'HOME' or 'RETURN' to close the App drawer and return to your desktop. The 'RECENT ACTIVITY' icon will show an overview of the active and recently opened applications. Click on the small displayed preview to open that application.

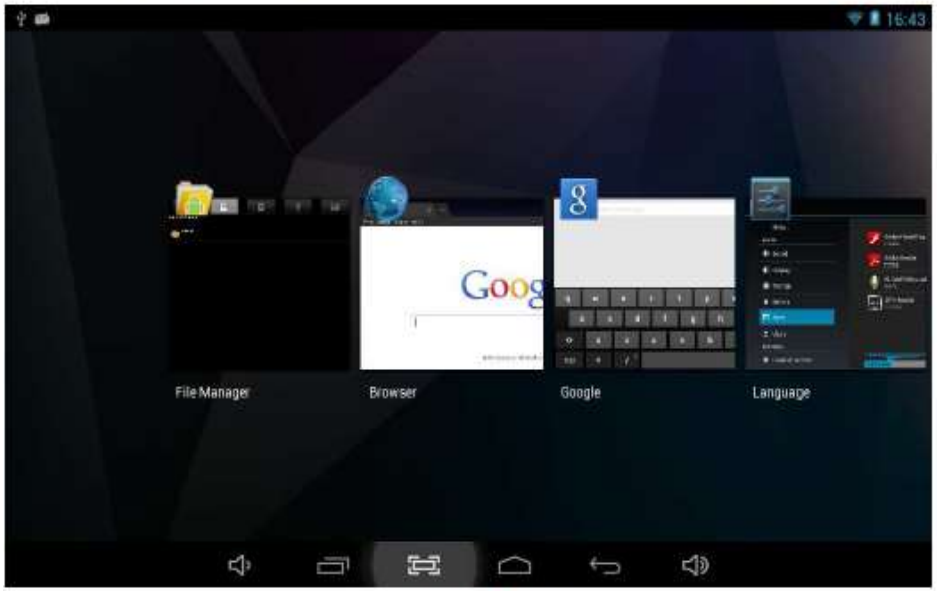

recent activity preview

2.5 Status information area – top of the screen

The top icon bar will show some system information (i.e. 15:02). The contents of this area can change if installed applications place additional information here. Sliding it down will open a small overlay menu displaying the date/time information, the tablet's current network status, the battery status and a shortcut icon to another quick menu where some things like 'Airplane mode', 'Wi-Fi', the screen brightness and other options can be set or toggled. Also this quick menu contains a shortcut to the 'Settings' menu. Simply clicking elsewhere on the screen will close this menu.

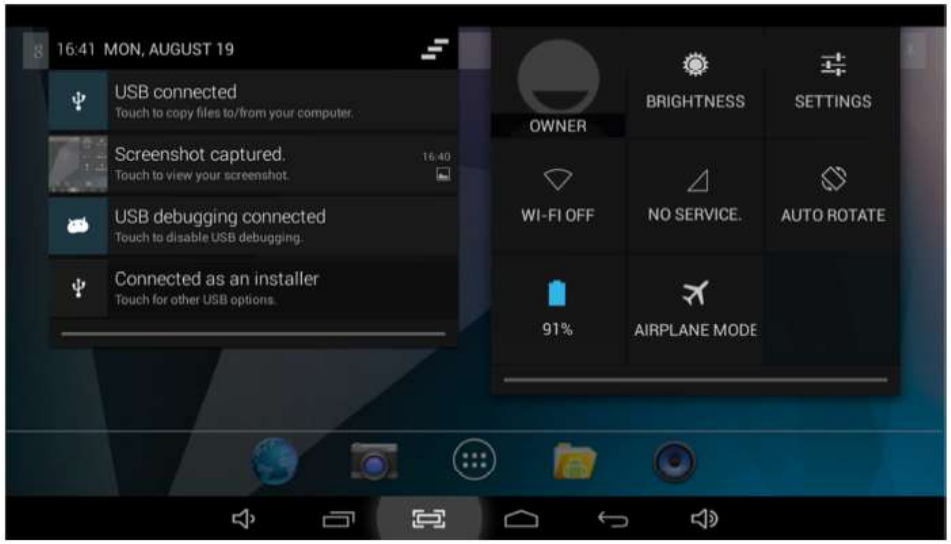

3.3 Administer / remove apps

The 'Apps' item in the 'Settings' menu will display an overview of the installed apps. There are four tabs available which filter the displayed app list. Select an app to view its detailed information. In the detailed information you also have the options 'Force Stop', 'Uninstall', 'Clear data' and 'Move to SD card'. Moving apps to your SD card can save you some internal storage memory on the tablet.

The 'Clear cache' and 'Clear defaults' can be used when you are experiencing issues with a specific app. Clearing cached information and (possible wrong) default settings may solve the problem. Clearing this information will also wipe any stored login information, i.e. clearing the cache of your social media app will also force you to re-login afterwards. Apps may also be removed in the apps content page of the Play Store™ / shop application.

3.0 General operation

3.1 Battery status / charging your tablet

The current battery status will be always displayed in the top right of the screen in the system information bar. The battery icon will change accordingly to the battery status. When connected to the DC charger, the status area on the top bar will display the charging icon. Note the lightning symbol inside the battery icon.

3.2 Installing Apps

You can install your own Apps by opening the Apps shop (Google Play Store™). This button can be found in the 'App drawer'. The Apps shop is located on the top right of the screen. Note that not all applications may function properly for your tablet. Some are made especially for small screen devices such as phones.

4.0 Basic setup

4.1 Changing operating language

Press the icon in the bottom center of the desktop to open the App drawer. Select the 'Settings' option to open the Android settings menu.

When selecting the option 'Language & input' the contents will be displayed in the right pane. Now open the option 'Language' and choose a language for your tablet to operate in. This pane also displays the keyboard settings which you can customize, enable or disable.

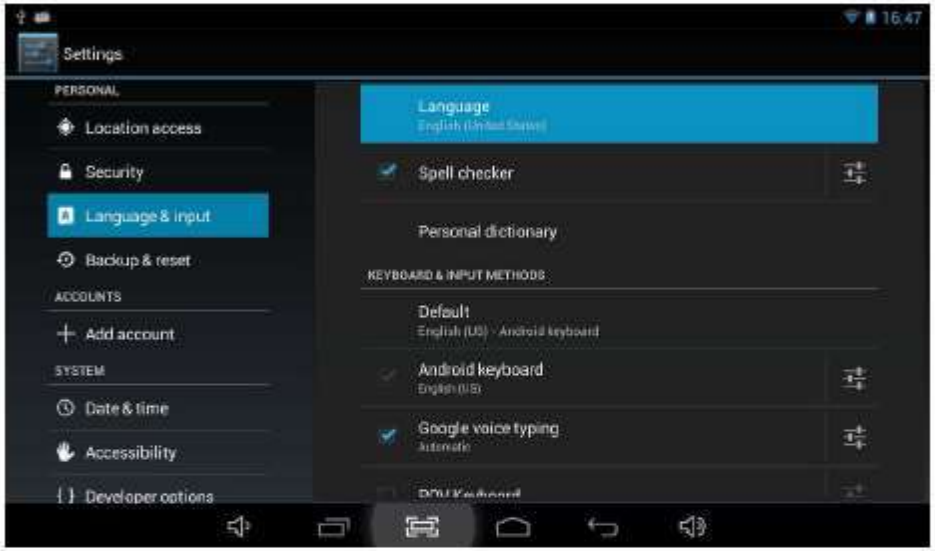

4.2 Wi-Fi settings

Press the icon in the bottom center of the desktop to open the App drawer. Select the 'Settings' option to open the Android settings menu. When selecting the option 'Wi-Fi' the contents will be displayed in the right pane. The OFF ON switch allows you to quickly toggle Wi-Fi on and off.

In the 'Wi-Fi' content panel you can view the formerly used Wi-Fi networks and the Wi-Fi networks that have been detected by the tablet. To research for new available networks; please press '↻' located in the right top corner. The option '+' allows you to add a network by manually inputting the SSID network and security method.

Whether manually added or automatically detected, you may need to fill in a password to be accepted on the network. Please contact your system or network administrator for the correct information.

Advanced network settings can be found by clicking the options icon .